



CARE & CLEANING INSTRUCTIONS



General Cleaning

- Clorox-type wipes or a soft bristle brush with a mild cleanser such as soap and water solution are ideal for this product.
- A soft bristled toothbrush can be used to clean crevices that are hard to reach.
- Our furniture does not absorb water and requires no painting, staining, or waterproofing.

Deep Cleaning

- For deeper cleaning, a pressure washer can be used on the lightest setting.
- Do not use more than 1,500psi.
- Keep the tip of the pressure washer at least 10-12 inches from the furniture surface so it doesn't damage the lumber.

Stain Chart

| Stain | Cleaning Process |
|---|---|
| Grease / Oil | Mix dish soap and water into a solution, saturate the stain, then rinse with water |
| Ink / Marker | Mix dish soap and water into a solution, saturate the stain, then rinse with water. For stubborn stains, pretreat with WD-40® |
| Embedded Dirt Wine Bird Droppings | Mix dish soap and water into a solution, saturate the stain, scrub with a soft brush, then rinse with water |
| Gum / Wax | Apply WD-40® over the area. With a plastic knife, gently remove any potentially hard articles. Use a soft brush & acetone solvent to remove any fine remains and clean out crevasses, then rinse with water |
| Scuffs / Stains | Scrub with a Magic Eraser™ |
| Rust / Iron | Scrub with Iron Out™ |

When using an alternative cleaning solution or process, always test it on an inconspicuous part of the lumber to make sure it is not going to damage the surface.