

**Care Instruction and Tips:**

Great care has been put into manufacturing this item. However, it is made of wood and some natural imperfections (minor splits, check cracks and dark spots) are normal and should be expected. We have applied Olympic Maximum Water Proofing Sealant and Penetrating Oil Honey Gold formula to your stand to help protect it from the elements. Should you notice a change in color over time, do not worry, this is normal as cypress wood will weather to a beautiful pewter gray. If you would like to preserve the golden color, you can further treat it with a polyurethane marine grade varnish of your choice. If not varnished, we recommend that each year you apply a coat of boiled linseed oil to protect the wood and apply water proofing sealant as needed.

We strongly recommend storing your stand inside a dry place during the harshest months of the year. This stand folds fairly well on itself when the two eye bolts are removed from the top braces. If storage is not an option, putting a tarp under and over the stand is highly recommended. Visit your local hardware store for Olympic Gold water sealant, linseed oil, or tarps.\*These instructions also are available at [www.nagsheadhammocks.com/s-2stnh.asp](http://www.nagsheadhammocks.com/s-2stnh.asp)

**Warning:**

Always use extreme caution when putting Nags Head items up or down. Some parts are heavy and can be hazardous. Prevent accidents by finding someone to assist you during assembly. Make sure all bolts are tightened before usage. Do not overtighten bolts as they can break. Always supervise children when using our products. Never exceed weight limits of products. Do not jump on or use products in non-intended ways. Proper maintenance is the key to enjoying your Nags Head Hammocks product for many years.

**Warranty:**

Products of Nags Head Hammocks are guaranteed to be free of defects in workmanship or material. We will replace defective parts for free. Simply call us and we will see that you get what you need. Prolonged exposure to weather conditions including snow, rain, and humidity are not covered under the warranty nor is damage caused by normal wear, mildew, improper care including storage, maintenance, and assembly.

**Returns:**

Nags Head Hammocks has a money back guarantee. If you are not satisfied with an item, return it unused in its original packaging for a complete merchandise refund or exchange. You can return it to any store or to our warehouse, Nags Head Hammocks, 305 Industrial Blvd., Greenville, NC 27834. Please include a copy of your receipt and your contact information.

Nags Head Hammocks  
PO Box 533, Nags Head,  
NC 27959  
[www.nagsheadhammocks.com](http://www.nagsheadhammocks.com)  
800-344-6433



Congratulations on your purchase. You now have one of Nags Head Hammocks' innovative products! If you have any questions regarding this product, we invite you to call us 7 days a week at 800-344-6433.







Helpful tips before starting:





- Get someone to help you. Some pieces are heavy and a second pair of hands always helps.
- Do not tighten the bolts completely until the product is fully assembled. Some pieces are harder to fit in place and this will help. A hammer or rubber mallet is needed during assembly.
- Do not over-tighten the bolts or screws.
- The photos in our product catalog can provide additional help while assembling your item.
- Build your item close to where it will be used to eliminate difficulty in moving once completed.
- For a uniform look, face all nuts in the same direction.

Cypress Swing Stand #SKU S-2STNH



Instruction #: 5041NH, 11.0P

The Cypress Swing Stand comes in two boxes:	
<b>Box 1</b> <b>S-2ST-CBEAMNHM</b> 1 Top Section and 2 Top Braces	<b>Box 2</b> <b>S-2ST-LEGSNHM</b> 4 Legs, 2 Leg Braces and Box of Hardware
	
The Box of Hardware contains:	Also needed:
	Rubber Mallet or Hammer One Ratchet/Key with a size 9/16" Socket Screwdriver that fits inside the holes of Socket Tool
<b>STEP 1</b>	<b>STEP 2</b>
Place two Legs and the Top Section on the ground. Place a washer on the long bolt and insert. Use a hammer/mallet to gently tap the bolts through the holes. Place washer and nut on.	Put the Leg Brace in place using short bolts. Put the washer in place and insert the bolt. Repeat STEP 1 and 2 on other side.
 	

<b>STEP 3</b>	<b>STEP 4</b>
Using long bolts, insert Top Brace between the Legs with pointed ends facing upward. Repeat on other side.	Lift one end of the stand. You might need help for this one!
	
<b>STEP 4.2</b>	<b>STEP 4.3</b>
Insert long Eye Bolts using a washer on each side.	Note: Position the Eye Bolts perpendicular to the stand.
	
<b>STEP 5</b>	<b>STEP 6</b>
Using a ladder or steps, tighten the eyebolts in place. Repeat Step 4 and 5 on other side.	Secure ALL nuts and bolts. If you have a Deluxe Bent Oak Porch Swing (swing with table between the seats) you will need to use the additional Short Eye Bolts. Simply insert them into the Top Braces with a washer on each side.
